


Quick Installation Guide

GS-7605 | 5-Port PoE Gigabit Ethernet Smart-Lite Switch



I-1. Package Contents

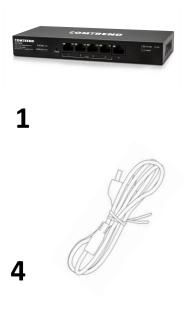




- **2.** QIG
- 3. Manual CD



2



3

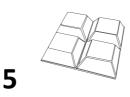

- 4. Power Adapter
- 5. 4 x Foot Pads

I-2. Hardware Overview

Front Panel

The front panel of the switch consists of:

- 5 x 10/100/1000Mbps RJ-45 Ports

 Ports 1-4 are PoE Capable
- A Series of LED Indicators



Rear Panel

The rear panel of the switch features the AC power connector



I-3. LED Indicator

Power/SYS:

| LED Status | Mode | Description |
|------------|----------|-------------------|
| Croop | On | Power on |
| Green | Blinking | System boot-up |
| Off | Off | Power off or fail |

Link/ACT:

| LED Status | Mode | Description |
|------------|-------------|--|
| Green | On/Blinking | 1000Mbps connected/data transmitting |
| Amber | On/Blinking | 10/100Mbps connected/data transmitting |
| Off | Off | Disconnected or fail |

PoE Max:


| LED Status | Mode | Description |
|------------|------|--|
| Green | On | PoE power output is over 55W PoE power budget |
| Off | Off | PoE power output is under 55W PoE power budget |

PoE:

| LED Status | Mode | Description |
|------------|------|-------------------------|
| Green | On | PoE power output is on |
| Off | Off | PoE power output is off |

I-4. Desktop Installation

Install the switch on a desktop by attaching the cushioning rubber feet to the bottom corners of the switch to protect against external vibration. Allow adequate space for ventilation between the device and any objects around.

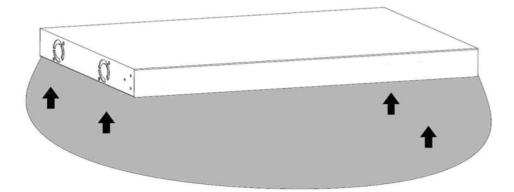




II-1. Switch to End Device

1. Connect the switch to local power with the included power cable.

2. Use a standard Cat 5/5e Ethernet cable to connect the switch to end devices as shown below. Switch ports will automatically adjust to the link rate of the device to which it's connected.


Optionally, any port can be used to uplink to an existing network.

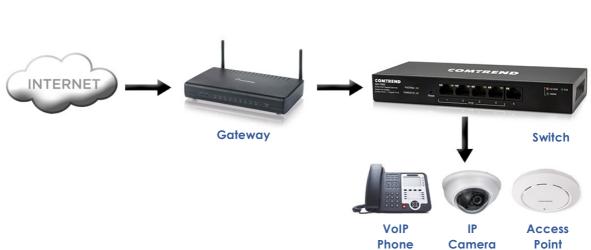

Application Diagram

II-2. Login

- 1. Open a web browser and go to the switch's IP address.
- 2. Enter the access point's default IP address **192.168.169.1** into the URL bar of a web browser.

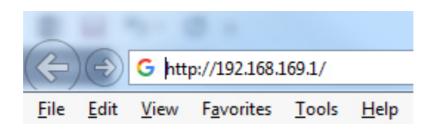

3. You will be prompted for a password. Enter the default password "admin".

4. You will arrive at the switch configuration window as shown below:

| | System | |
|---|------------------|-------------------|
| <u>System</u> | Model Name | GS-7605 |
| <u>Management</u> Port | Device Name | <u>GS-7605</u> |
| VLAN | Firmware Version | 1.00.25 |
| Trunking | Build Date | 2016.05.19 |
| | MAC Address | 00:10:18:55:44:4B |
| | IPv4 Address | 192.168.169.1 |
| Broadcast Storm Control | Subnet Mask | 255.255.255.0 |
| | PoE Status | Normal |
| <u>PoE</u> <u>Password</u> Logout | | |



FOR MORE HELP: For instructions on advanced features, FAQ, etc., please visit our online Product Webpage.

For more information:

YouTube: https://www.youtube.com/user/ComtrendConnection Facebook: https://facebook.com/Comtrend Website: http://us.comtrend.com/ Support: Visit our website or call 1-877-COMTREND (1-877-266-8736)

