


Quick Installation Guide


WAP-PC1200C | AC1200 Ceiling Mount Access Point

I Product Information


I-1. Package Contents

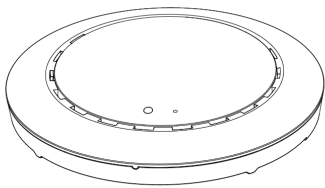

1

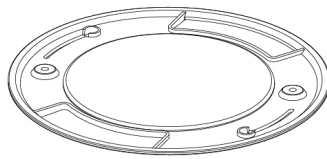


2

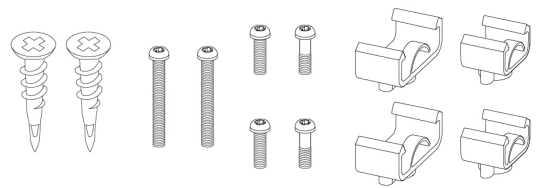

3



4

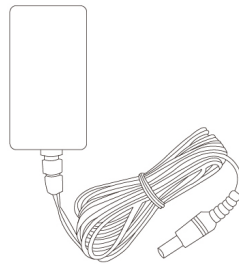

5

1. Access Point

2. Ceiling Mount Bracket

3. Drop Ceiling Mounting Kit


4. Quick Installation Guide

5. Power Adapter

I-2. System Requirements

- Existing cable/DSL modem & router.
- Computer with web browser for access point configuration.

I-3. Hardware Overview

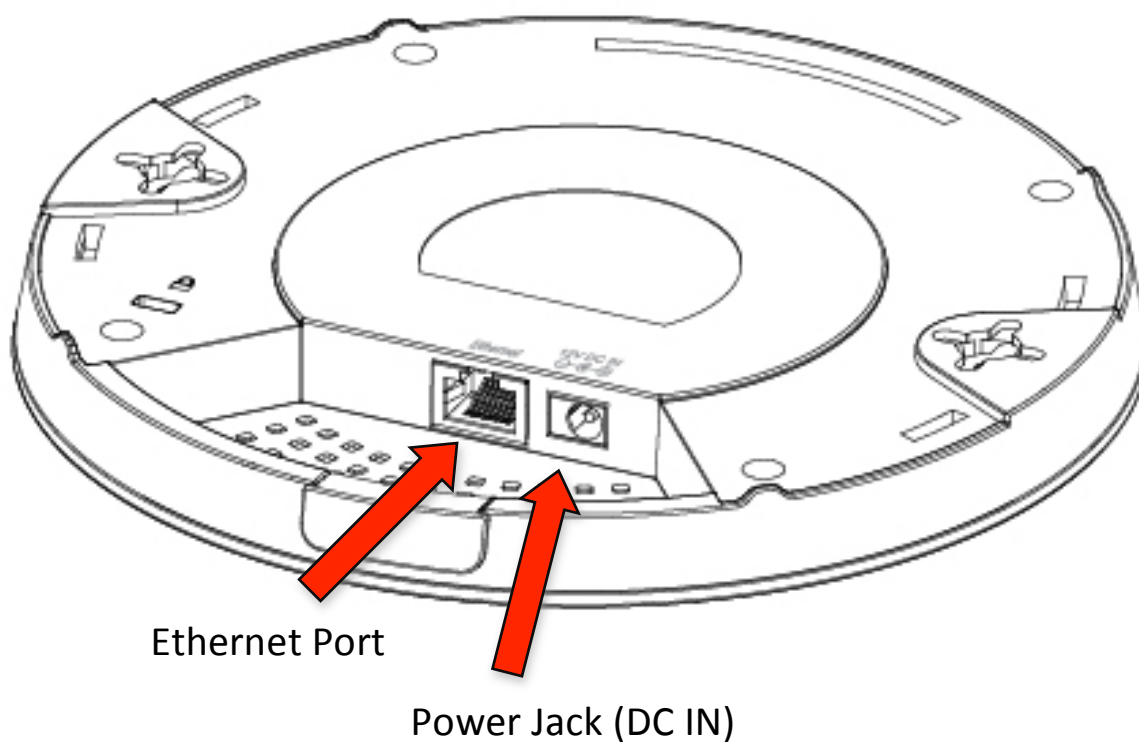

I-4. LED Status

LED Color	LED Status	Description
Blue	On	The access point is starting up.
Purple	On	The access point is on.
Amber	Flashing	Error.
Off	Off	The access point is off.


I-5. Reset

If you experience problems with your access point, you can reset the device back to its factory settings. This will reset all settings back to default.

1. Press and hold the reset button on the access point for at least 10 seconds. Then release the button.



You may need to use a paperclip or pencil to push the reset button.

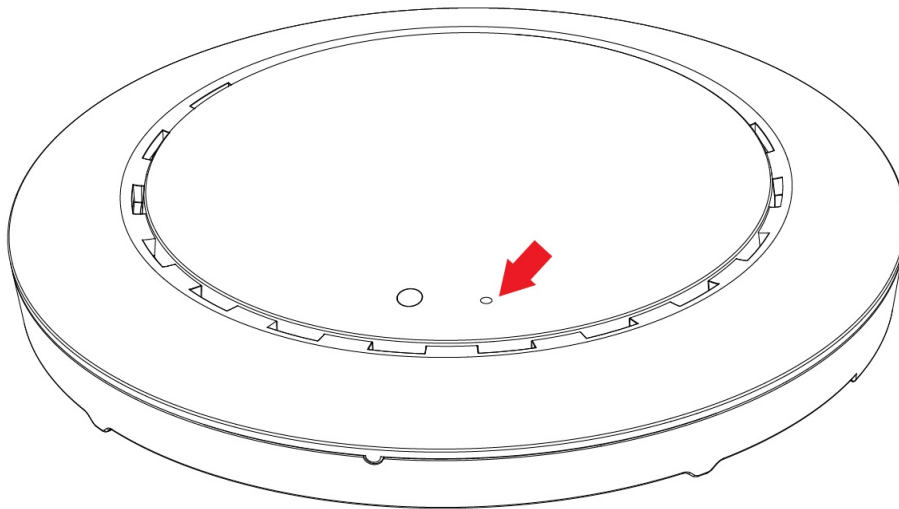

2. Wait for the access point to restart. The access point is ready for setup when the LED is **Purple**.

I-6. Mounting the access point to a ceiling


To mount the access point to a ceiling, please follow the instructions below and refer to diagrams **A & B**.

For Ceiling Mounting (refer to diagram A and diagram B):


1. Using the supplied screws, attach the ceiling mounting bracket to the ceiling in the location you have selected (Diagram A). Use the included screw anchors when necessary (Diagram B). Tighten the screws to hold the bracket firmly to the ceiling.
2. Insert the two screws (see diagram) in to the wireless access point.

3. Attach the wireless access point to the ceiling bracket by inserting the heads of the screws of the access point in to the channel guides on the ceiling bracket.
4. Rotate the wireless access point to lock the access point firmly in to place.

A

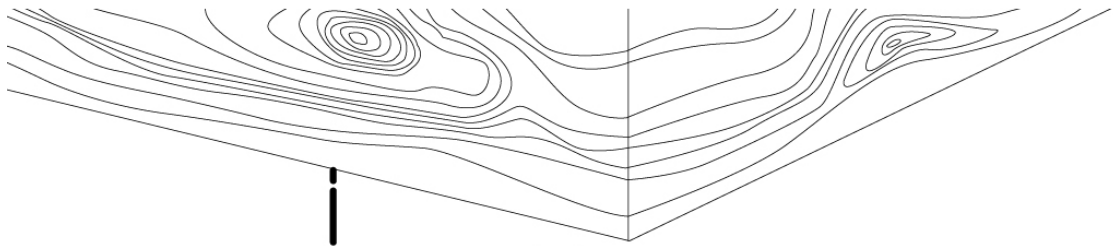


B

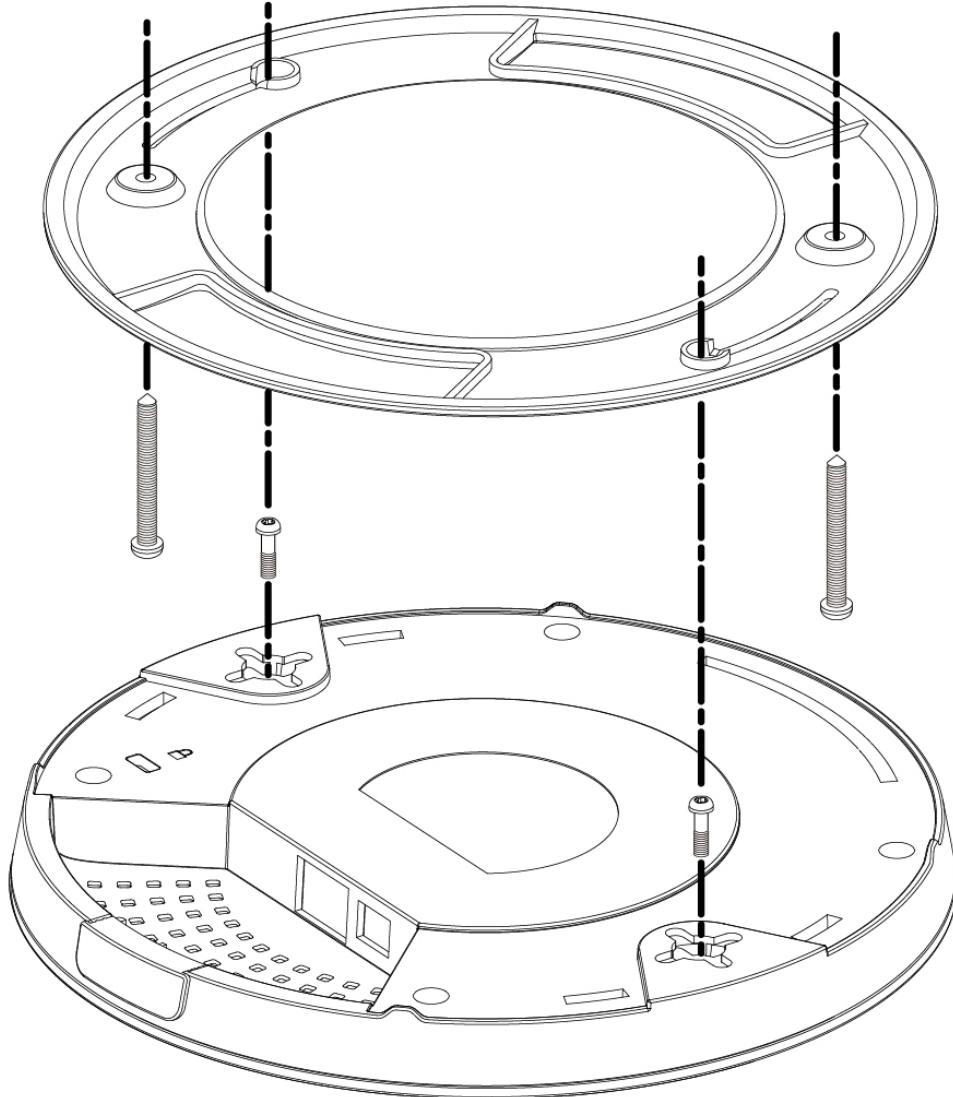

I-7. Drop Ceiling/Suspended Ceiling Mount


To mount the access point to a drop ceiling rail, follow the instructions below and refer to diagram **C**, **D** & **E**.

1. Select the correct size rail bracket. Two sizes have been included with this access point.
2. Attach the rail brackets to the access point as shown in Diagram C.


 ***If more clearance is needed between the access point and the rail, use the optional standoff between the access point and rail clip (Diagram D). Use the longer screws (included) to attach the clips to the access point.***

3. Attach the access point to the ceiling rail as shown in Diagram E.
4. Clip the access point onto your ceiling rail using the now attached rail clip.


C

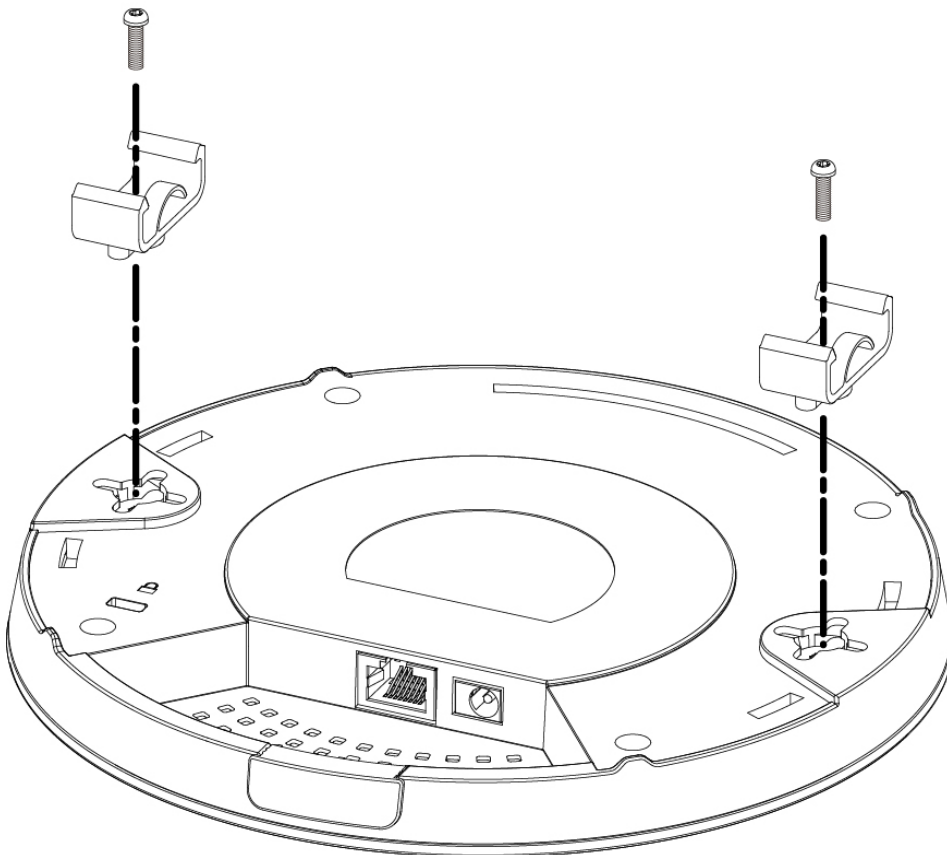


D

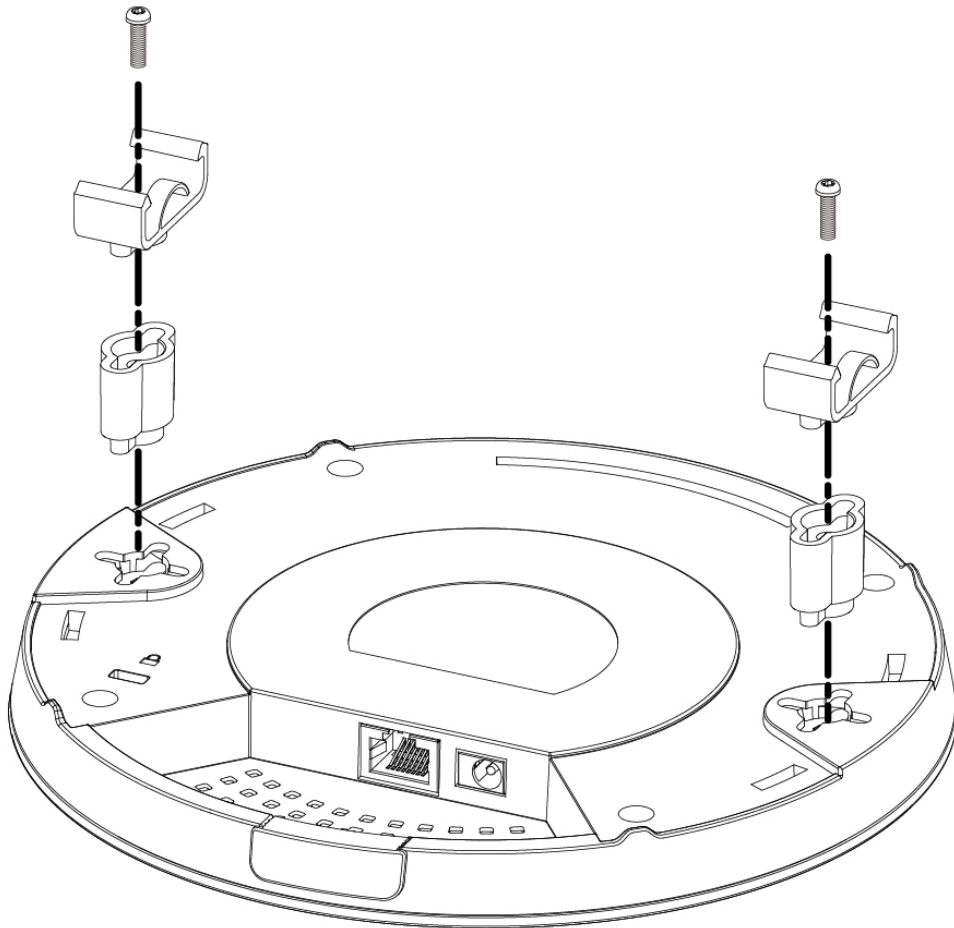

E

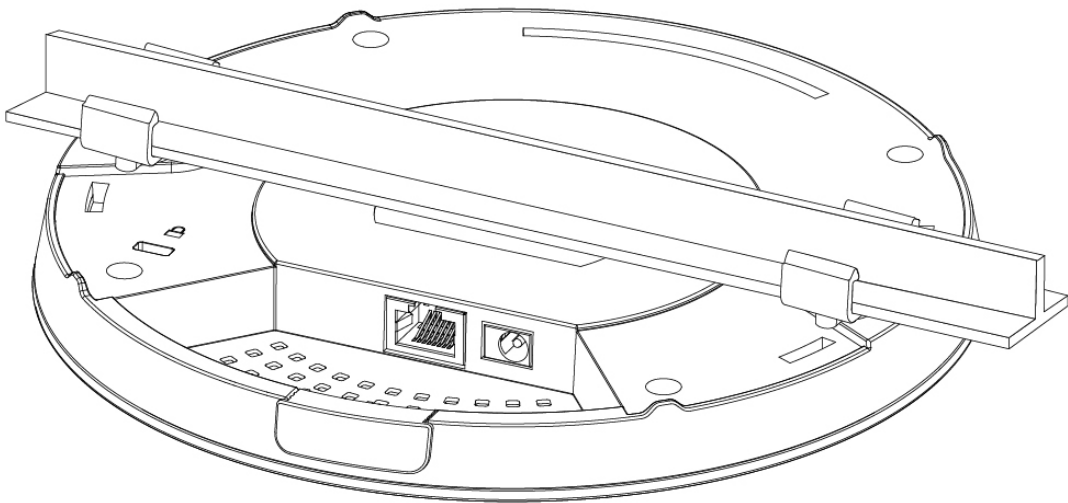

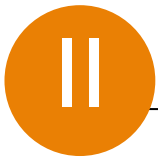


Quick Setup

Your access point is preconfigured in a secured setup and ready for use right out of the box. The following instructions will help you install your access point and customize your settings.

II-1. Initial Setup

1. Connect the access point to a computer via Ethernet cable (not included).
2. Connect the power adapter to the access point's 12V DC port and plug the power adapter into a power outlet on the wall. Skip this step if using PoE to power your access point.

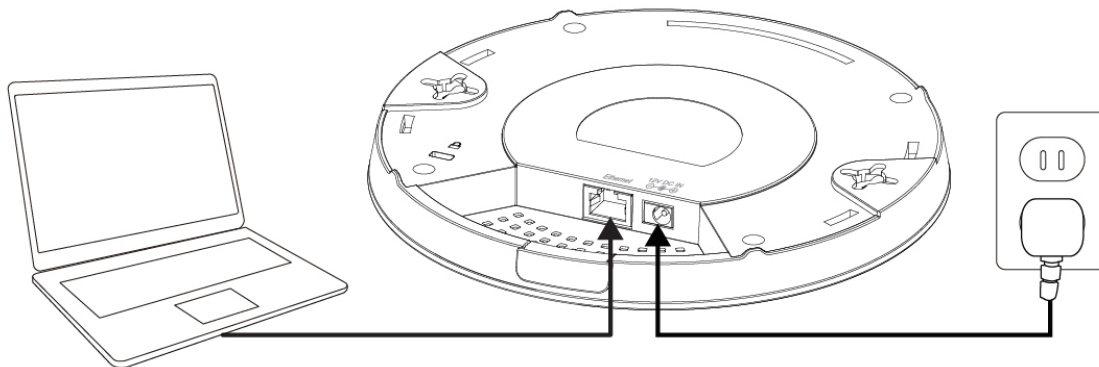


3. Wait a moment for the access point to start up. The access point is ready when the LED is **Purple**.
4. Set your computer's IP address to **192.168.2.x** where **x** is a number in the range **3 – 100**.




Please ensure there are no other active network connections on your computer (disconnect Wi-Fi connections and Ethernet cables).

5. Enter the access point's default IP address **192.168.2.1** into the URL bar of a web browser. (Default IP address of 192.168.2.1 is used when no DHCP Server is found)

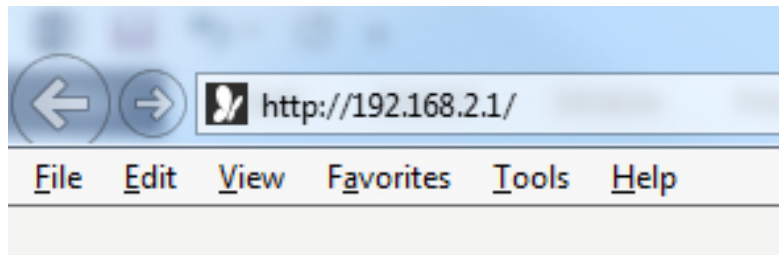

6. You will be prompted for a username and password. Enter the default username “admin” and the default password “admin”.

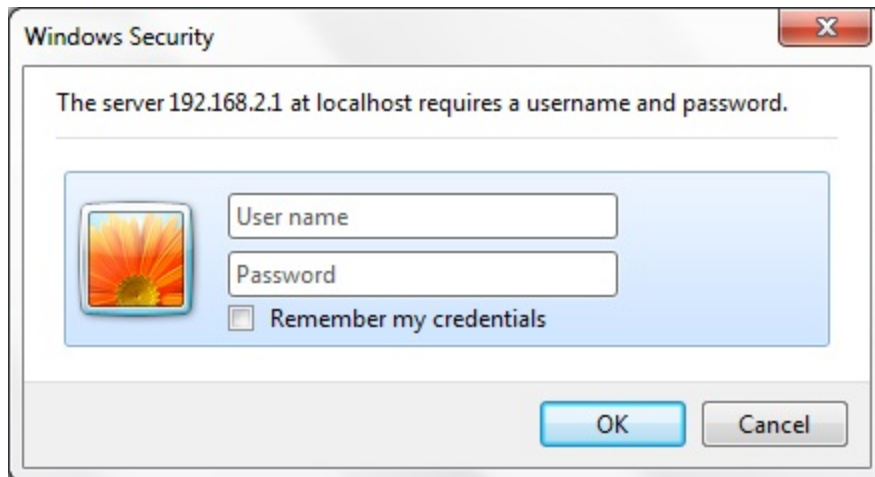

7. You will arrive the “System Information” screen shown below.

COMTREND WAP-PC1200C Information Network Settings Wireless Settings Management Advanced

Home | Logout | Global (English)

Information

- > System Information
- > Wireless Clients
- > Wireless Monitor
- > Log

System Information

System	
Model	WAP-PC1200C
Product Name	AP74DA38268D32
Uptime	0 day 00:03:11
Boot from	Internal memory
Version	1.0.3
MAC Address	74:DA:38:26:8D:32
Management VLAN ID	1
IP Address	192.168.0.106 Refresh
Default Gateway	192.168.0.1
DNS	4.2.2.2 4.2.2.1
DHCP Server	192.168.0.1

Wired LAN Port Settings

Wired LAN Port	Status	VLAN Mode/ID
Wired Port (#1)	Connected (100 Mbps Full-Duplex)	Untagged Port / 1

8. Follow the instructions below in **II-2. Basic Settings** to configure basic settings.

II-2. Basic Settings

The instructions below will help you configure the following basic settings of the access point:

- **LAN IP Address**
- **2.4GHz & 5GHz SSID & Security**
- **Administrator Name & Password**
- **Time & Date**



It is recommended you configure these settings before using the access point.

1. To change the access point's LAN IP address, go to **“Network Settings” > “LAN-side IP Address”** and you will see the screen below.

LAN-side IP Address	
IP Address Assignment	DHCP Client <input type="button" value="v"/>
IP Address	192.168.2.2
Subnet Mask	255.255.255.0
Default Gateway	From DHCP <input type="button" value="v"/> <input type="text"/>


DNS Servers	
Primary Address	From DHCP <input type="button" value="v"/> <input type="text"/>
Secondary Address	From DHCP <input type="button" value="v"/> <input type="text"/>

2. Enter the IP address settings you wish to use for your access point. You can use a dynamic (DHCP) or static IP address, depending on your network environment. Click **“Apply”** to save the changes and wait a few moments for the access point to reload. (Default setting is DHCP Enabled)



When you change your access point's IP address, you need to use the new IP address to access the browser based configuration interface instead of the default IP 192.168.2.1.

3. To change the SSID of your access point's 2.4GHz wireless network(s), go to **"Wireless Setting" > "2.4GHz 11bgn" > "Basic"**. Enter the new SSID for your 2.4GHz wireless network in the "SSID1" field and click "Apply".

 **To utilize multiple 2.4GHz SSIDs, open the drop down menu labelled "Enable SSID number" and select how many SSIDs you require. Then enter a new SSID in the corresponding numbered fields below, before clicking "Apply".**

2.4GHz Basic Settings	
Wireless	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Band	11b/g/n
Enable SSID number	1
SSID1	CAP1200-CCDD10_G VLAN ID 1
Auto Channel	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Auto Channel Range	Ch 1 - 11
Auto Channel Interval	One day <input type="checkbox"/> Change channel even if clients are connected
Channel Bandwidth	Auto
BSS BasicRateSet	1,2,5.5,11 Mbps

4. To configure the security of your access point's 2.4GHz wireless network(s), go to **"Wireless Setting" > "2.4GHz 11bgn" > "Security"**. Select an "Authentication Method" and enter a "Pre-shared Key" or "Encryption Key" depending on your choice, then click "Apply".

 **If using multiple SSIDs, specify which SSID to configure using the "SSID" drop down menu.**

2.4GHz Wireless Security Settings	
SSID	CAP1200-CCDD10_G
Broadcast SSID	Enable
Wireless Client Isolation	Disable
Load Balancing	50 /50
Authentication Method	No Authentication
Additional Authentication	No additional authentication

5. Go to **"Wireless Setting" > "5GHz 11ac 11an"** and repeat steps 3 & 4 for the access point's 5GHz wireless network(s).

6. To change the administrator name and password for the browser based configuration interface, go to **“Management” > “Admin”**.

Account to Manage This Device	
Administrator Name	admin
Administrator Password	••••• (4-32 Characters)
	••••• (Confirm)
<input type="button" value="Apply"/>	

7. Complete the “Administrator Name” and “Administrator Password” fields and click “Apply”.
8. To set the correct time for your access point, go to **“Management” > “Date and Time”**.

Date and Time Settings	
Local Time	2012 Year Jan Month 1 Day
	0 Hours 00 Minutes 00 Seconds
<input type="button" value="Acquire Current Time from Your PC"/>	
NTP Time Server	
Use NTP	<input type="checkbox"/> Enable
Server Name	
Update Interval	24 hours
Time Zone	
Time Zone	(GMT) Greenwich Mean Time: Dublin, Edinburgh, Lisbon, London


9. Set the correct time and time zone for your access point using the drop down menus. The access point also supports NTP (Network Time Protocol) so alternatively you can enter the host name or IP address of a time server. Click “Apply” when you are finished.

 **You can use the “Acquire Current Time from your PC” button if you wish to set the access point to the same time as your PC.**


- 10.** The basic settings of your access point are now configured. Please refer to **III. Hardware Installation** for guidance on connecting your access point to a router or PoE switch.

Hardware Installation

- 1.** If you need to, remove the cap from the underside of the access point. This creates extra space for your cables to pass through.

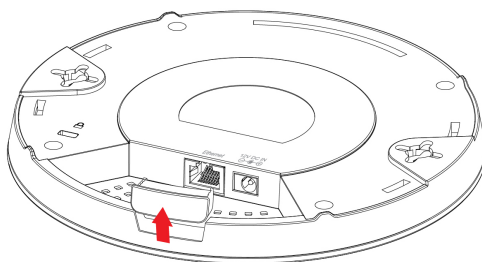


- 2.** Connect a router or PoE switch to the access point’s **LAN** port using an Ethernet cable.

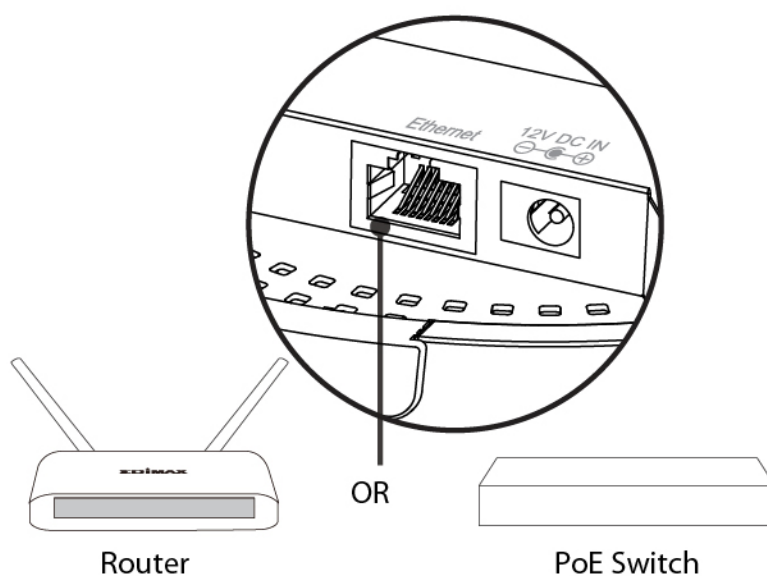

3. If you are using a router, then connect the power adapter to the access point's 12V DC port and plug the power adapter into a power supply.

4. If you are using a PoE (Power over Ethernet) switch then it is not necessary to use the included power adapter, the access point will be powered by the PoE switch.

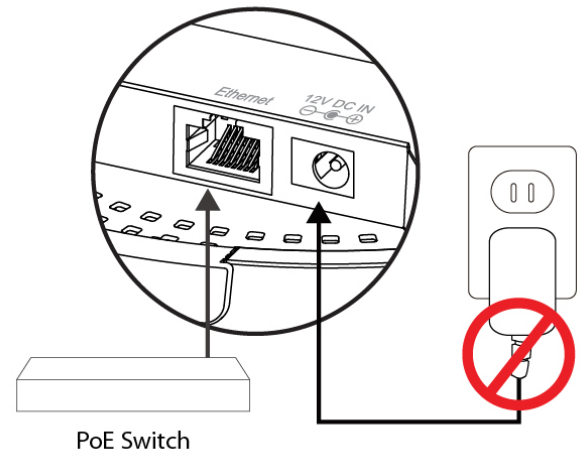

IV

Browser Based Configuration Interface

The browser-based configuration interface enables you to configure the access point's advanced features. The access point features a range of advanced functions such as MAC filtering, MAC RADIUS authentication, VLAN configurations, up to 32 SSIDs and many more. To access the browser based configuration interface:

1. Connect a computer to your access point using an Ethernet cable.
2. Enter your access point's IP address in the URL bar of a web browser. The access point's default IP address is **192.168.2.1. (Default IP address applies if No DHCP Server is detected).**
3. You will be prompted for a username and password. The default username is "admin" and the default password is "admin", though it was recommended that you change the password during setup (see **II-2. Basic Settings**).



If you cannot remember your password, reset the access point back to its factory default settings. Refer to I-5. Reset

4. You will arrive at the “System Information” screen shown below.

The screenshot shows the COMTREND WAP-PC1200C web interface. The top navigation bar includes 'Home | Logout | Global (English)'. Below it, a secondary navigation bar has 'Information', 'Network Settings', 'Wireless Settings', 'Management', and 'Advanced'. The left sidebar is titled 'Information' and contains links for 'System Information', 'Wireless Clients', 'Wireless Monitor', and 'Log'. The main content area is titled 'System Information' and is divided into two sections: 'System' and 'Wired LAN Port Settings'. The 'System' section contains a table with the following data:

Model	WAP-PC1200C
Product Name	AP74DA38268D32
Uptime	0 day 00:03:11
Boot from	Internal memory
Version	1.0.3
MAC Address	74:DA:38:26:8D:32
Management VLAN ID	1
IP Address	192.168.0.106 <input type="button" value="Refresh"/>
Default Gateway	192.168.0.1
DNS	4.2.2.2 4.2.2.1
DHCP Server	192.168.0.1

The 'Wired LAN Port Settings' section contains a table with the following data:

Wired LAN Port	Status	VLAN Mode/ID
Wired Port (#1)	Connected (100 Mbps Full-Duplex)	Untagged Port / 1

5. Use the menu across the top and down the left side to navigate.

The screenshot shows the COMTREND WAP-PC1200C web interface with the 'Wireless Settings' tab selected. The top navigation bar includes 'Home | Logout | Global (English)'. The secondary navigation bar has 'Information', 'Network Settings', 'Wireless Settings', 'Management', and 'Advanced'. The left sidebar is titled 'Wireless Settings' and contains links for '2.4GHz 11bgn', 'Basic', 'Advanced', 'Security', 'WDS', '5GHz 11ac 11an', 'Basic', 'Advanced', 'Security', 'WDS', 'WPS', 'RADIUS', 'RADIUS Settings', 'Internal Server', and 'RADIUS Accounts'. The main content area is titled 'Basic' and contains a section for '2.4GHz Basic Settings' with the following configuration options:


Wireless	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Band	11b/g/n
Enable SSID number	1
SSID1	WAP-PC1200C-268D32_G VLAN ID 1
Auto Channel	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Auto Channel Range	Ch 1 - 11
Auto Channel Interval	One day <input type="checkbox"/> Change channel even if clients are connected
Channel Bandwidth	Auto
BSS BasicRateSet	1,2,5,5,11 Mbps

The 'Apply' and 'Cancel' buttons at the bottom right are circled in red. Red arrows point to the '2.4GHz Basic Settings' header and the 'Basic' link in the left sidebar.

6. Click “Apply” to save changes and reload the access point, or “Cancel” to cancel changes.



Please wait a few seconds for the access point to reload after you “Apply” changes.

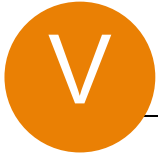

Your Device is Now Connected!

NOTE: For instructions on advanced features, FAQ, etc., please visit our online Product Webpage:

<http://us.comtrend.com/products/public/product/home-networking/wap-pc1200c.html>

For more information: Facebook: <https://facebook.com/Comtrend>

Website: <http://us.comtrend.com/>

Support: Visit our website or call 1-877-COMTREND
(1-877-266-8736)